Elgento®

For An Additional One Year Guarantee
Please Register Your Appliance
At The Website Below

www.elgento.co

and enjoy the peace of mind
of a

2* Year GUARANTEE

TECHNICAL SUPPORT

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Help line for immediate assistance.

0871 221 3619
OR
www.elgento.co

Elgento®

INSTRUCTION MANUAL

Electric Wok

E14018

2* Year GUARANTEE

SPECIFICATION DATA

30” Electric Wok

Product Code E14018
AC: 220V-240V ~50Hz
Power:1500W

Sutton House,
Berryhill Road,
Fenton
Stoke on Trent
Staffordshire,
ST4 2NL.

PARTS IDENTIFICATION

1. Handles
2. Power plug
3. Base
4. Body
5. Glass lid with feral

ELECTRICAL SAFETY

ELECTRICAL SAFETY
Class 1 Configuration
The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW: EARTH (E)
BLUE: NEUTRAL (N)
BROWN: LIVE (L)

Class 1 Configuration

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured GREEN & YELLOW (or coloured GREEN) must be connected to the terminal in the plug which is marked with the letter “E” or by the earth symbol .
The wire which is coloured BLUE (or coloured BLACK) must be connected to the NEUTRAL terminal which is marked with the letter “N”.
The wire which is coloured BROWN (or coloured RED) must be connected to the LIVE terminal which is marked with the letter “L”.
Always ensure that the Mains Cord is fixed into the plug through the Cord Guard or Cable Clamp, (plug wiring diagram above), and that the Cord Guard screws are tightened to clamp the cord (outer sheath and inner coloured wires) into position in the plug. Make sure that the plug top is also fitted securely.

This appliance must be protected by a 13Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only a 13Amp ASTA approved BS1362 fuse (13A).
OPERATIONAL GUIDELINES
It is important to ensure the correct Plug Adaptor is used when operating in a country not using the UK 13 Amp socket system. If in doubt, consult a qualified electrician.

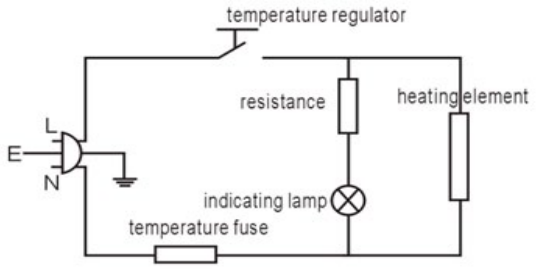

SAFETY INFORMATION

Please retain these instruction in a safe place for future reference

This product must be earthed ensure that the host electricity supply
Before connecting to the power supply, make sure the temperature regulator is connect fully with the body as a bad connection will produce heat and may damage the power connector
After use, turn the regulator knob counterclockwise to the off position, and plug is removed from the socket then unplug the power plug from the appliance
Do not touch the pan during the cooking or the short period after power off, because it's very hot allow to cool fully.
All repairs must be carried out by a qualified electrician.
Do use in wet or damp environments such as out doors as this may cause a hazard and may result in damage to the appliance .
There are no user replaceable components in this appliance do not attempt to repair this yourself.
Do not operate the appliance with the pan empty, otherwise the non-stick coating in the pan may be damaged with the high temperatures produced by the appliance
This appliance is not intended to be used by children or the infirm without adequate supervision or instruction from the person responsible for their safety.
This appliance is not intended for commercial use **household use only**
Always allow the product to cool fully before moving or cleaning
Children should be supervised whilst the product is in use or cooling to ensure that they do not play with the appliance
Do not use in conjunction with remote or timer devices as this represents a fire hazard
We would recommend the use of oven gloves or similar heat protection whilst using this product
Please allow the power connector to fully cool before handling or storage.

USING YOUR HOTPLATE

BEFORE CONNECT POWER SUPPLY:
Dry the inner and outer surface of the appliance with dry cloth before use, especially the plug and the pedestal the, to avoid electricity shock.
Insert the temperature regulator to the pan body; make sure they are fully connected. Otherwise the temperature rise will be affected, and the temperature regulator will be damaged because of overheat by bad contact.
Please turn the regulator knob counterclockwise to the end before having the power connected, and make sure the rated voltage of the power supply is correct, and the rated current of the power supply should not be less than 10A with safe earth, otherwise the appliance should not be operated.

START TO OPERATE
Connect the power supply, turn the regulator knob clockwise, and the indicator lamp is lit, then it's ready for heating.
You can adjust the temperature according to the need during cooking
THE WAY TO ADJUST THE TEMPERATURE:
Turn the regulator knob clockwise. And the Heat will go from OFF to Maximum
Turn the regulator knob counterclockwise, and Heat will go from Maximum to the OFF.

CLEANING

Unplug the power plug after and the temperature regulator each use.
To avoid electric shock, do not immerse the temperature regulator and power plug into the liquid or water.
Caution Only Start cleaning the appliance after it's cooled down completely use the soft cloth to clean the appliance slightly.
Do not use the metal brush and corrosive solvent, otherwise the coating and the surface of the pan will be damaged.
fill the pan with hot soapy water and wipe round with a soft wet cloth
In the interests of safety please avoid the elements of this appliance coming into contact with water or other liquids

Declaration of Conformity

We PFD Ltd Declare that this product conforms to all the following product legislation
In accordance with the following directive(s):

2004/108/EEC. The Electromagnetic compatibility Directive
2006/95EC. The LVD directive (Low Voltage Directive)
2002/95/EC. The RoHS. Directive. (Restriction of Hazardous substances Directive)
1935/2004/EC Materials & Articles in Contact with Food. (LFGB section 30, 31 & 35)
Peter Bowden
Quality Assurance Manager
Sutton House, Berryhill Road, Fenton, Stoke-On-Trent,
Staffordshire, ST4 2NL.

GUARANTEE.

This product is guaranteed for 12 months from the date of the original purchase.
If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement are at the discretion of the Retailer .
The following conditions apply:

The product must be returned to the retailer with the proof of purchase.
The product must be installed and used in accordance with the instructions contained in this instruction guide.
For domestic purposes. ONLY.
It does not cover wear and tear, damage, misuse or consumable parts.
PFD has limited responsibility for incidental or consequential loss or damage.
Valid in the UK and Eire only.

Imported & Distributed throughout the U.K.By PFD. ST4 2NL | www.elgento.co

DISPOSAL OF UNIT

Disposal instructions for Elgento items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recyclemore.co.uk, or www.recylcenow.co.uk for access to information about the recycling of electrical items.
Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.
The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.